


# EBCO TELESCOPIC BOUNDARY BOX

## **INSTALLATION INSTRUCTIONS**



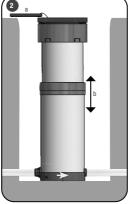

1. The service should be flushed fully to avoid any debris entering the system before connecting the service pipes. Place the complete unit in position on firm even ground and connect the inlet and outlet pipe work (see below). Avoid excess stress being placed on the connections. If necessary use additional fittings to align the pipes. The direction of the flow is indicated by an arrow on the base.

2. Open the surface box lid (a) to allow the telescopic chamber (b) to extend and adjust the box height to the approximate height of the final reinstatement level.

Remove the red end cap from the blue cone of the EBCO Push Fit connection and remove the liner

(1) and insert it fully into the PE pipe. Once the liner is inserted into the pipe push the pipe fully into


Liner (1)

Fit a correctly sized BSP thread adaptor fitting into the EBCO socket, following the instructions of

EBCO THREADED OUTLET ASSEMBLY INSTRUCTIONS

EBCO PUSH FIT ASSEMBLY INSTRUCTIONS

the PE end, past two points of resistance, until it is fully seated.

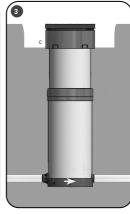

3. Close the lid and backfill with granular material in well compacted 100mm layers to the bottom of the surface box frame (c).

Notes: Reference should be made to HAUC regulations governing reinstatement as well as adhering to good general working practices.



4. Prise lid to break the seal. Using the final adjustment available in the surface box frame, ensure the frame and cover meet the final level requirement. The surface box frame may be raised approximately 25mm above the final surface level then compacted down with the surrounding material, helping to improve reinstatement quality. Close the lid and continue to backfill up to a level below the top of the surface box that allows for the top surface material thickness, compacting the backfill. Finish to the final surface level. Ensure the surface box flange is supported by well compacted backfill in order to prevent lid settlement. Ensure that correct and accurate level and inclination are achieved to suit surrounding area to avoid potential trip hazards.

Note: For compaction and final reinstatement of the surface box, we recommend the use of contractors' rammers or similar hand tool.

PHONE +44 (0)845 077 9797

the fitting manufacturer and fit the pipe to the fitting.

#### FAX +44 (0)845 077 9798

### E-MAIL enquiries@atplas.co.uk INTERNET www.atplas.co.uk


Atlantic Plastics Ltd Coytrahene Close, Brackla Industrial Estate, Bridgend CF31 2AX United Kingdom




# **EBCO RIGID BOUNDARY BOX**

### **INSTALLATION INSTRUCTIONS**


Atplas boundary boxes are designed to comply with the relevant aspects of BS 5834 parts 1 and 2. Grade C and Grade B options are available. They are designed for convevance of cold potable water only. No warranty is given nor liability accepted by Atplas for use for any other purpose. for failure to comply with these installation instructions, or for alterations made to the boxes. Atplas recommends the use of suitable protective clothing such as gloves, overalls, eve protection and safety footwear during installation.

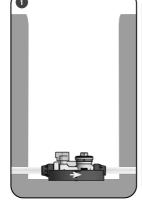

 The service should be flushed fully to avoid any debris entering the system before connecting the service pipes. Remove the guard tube from the manifold section and sit the manifold in position on firm ground and connect the inlet and outlet pipework. Avoid excess stress being placed on the connections. If necessary use additional fittings to align the pipes. The direction of flow is indicated by an arrow on the base. Please see EBCO fitting instructions overleaf.

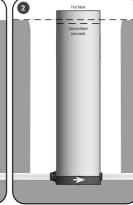


2. When cutting the guard tube to length ensure that the surface box lid and any top hat adaptor used will be supported only by well compacted backfill material and not by the guard tube itself. To do this re-fit the quard tube and firstly mark the final surface level on the tube. Remove the tube and, using this mark and the chosen surface box/top hat adaptor as a quide, mark the tube a second time to indicate the cutting point to ensure the surface box will sit on the backfill material when finally installed. Cut the guard tube square at the second mark with an appropriate saw.

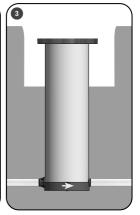


3. Replace the guard tube and cover it to prevent contamination of the chamber and backfill with granular material in well compacted 100mm layers. This needs to be to a level that will allow the fitment of the frame and cover.

Notes: Reference should be made to HAUC regulations governing reinstatement as well as adhering to good general working practices.

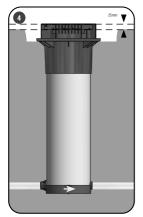

4. Remove the temporary tube cover and ensure any frost protection is fitted inside the tube. Fit the surface box frame and cover raised about 25mm above final surface level. Reinstate backfill material to level of base of surface box/lid assembly. Ensure that the surface box or top hat flange is supported by well compacted backfill material before completing reinstatement to final level.

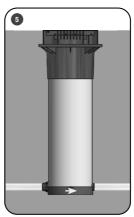

 Continue to reinstate backfill material to final surface level.
Compact surface box frame and cover with surrounding material to final height. Ensure that lid height and inclination match the surrounding ground level to avoid potential trip hazards.

Note: For compaction and final reinstatement of the surface box, we recommend the use of contractors' rammers or similar hand tool.

We reserve the right to change the design and specification without notice.