

# EBCO FILTER HOUSING

## INSTALLATION INSTRUCTIONS

### General Details:

Available in 2 sizes

Particulate - Filter Housing

### Filter housing:


Part Number: WMB150 (10")

Part Number: WMB179 (4")

### Materials:

Gunmetal end fittings

PVC water pipe body

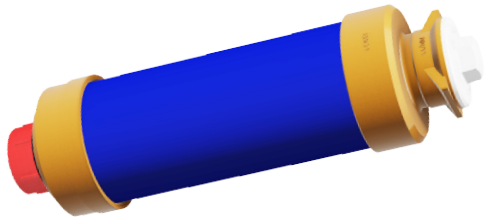

### Attachment

Fits standard 1½" concentric meter port

- Boundary box/concentric meter-housings supplied with full-flow plug & seal kit
- Top mounting of 1½" concentric meter where required, subject to:
- Clear height, location & installation type

### Filter exchange guide:

This is not an on-site operation. Exchange units are recommended to be taken to site ready to fit.

NB: filter housing is supplied with top cap loosened to allow initial filter to be fitted.

1. Isolate service (operate stopvalve) and remove meter (if fitted)
2. Remove filter housing from installation
3. Secure filter housing base in vice (or similar)
4. Using 2-5/8<sup>th</sup> AF spanner (or similar) unscrew the top section
5. Remove filter, ensure the central tube is retained/replaced into the base unit
6. Flush out the filter housing body as required then fit new filter
7. Using alignment tool, re-fit the top cap, ensuring the central tube is in place
8. Using 2-5/8<sup>th</sup> AF spanner (or similar) tighten up the top section
9. Re-fit the filter housing to the installation including the meter if applicable
10. Recharge the supply, flushing through as required

The filters are typically available with various micron grades